

Installing software update for the Uber FM Transmitter (UB5-937-2)

1. Click on the download link to start the process of downloading the new update to your computer.
2. Once downloaded, look in your downloads folder on your computer. Double-Click on the zip folder to unzip all the files.
3. Copy all unzipped files onto an empty the USB flash drive.
4. Take the USB flash drive out to your vehicle.
5. Insert your FM Transmitter into the 12V socket of your vehicle and start the car.
6. Turn FM Transmitter on and the display shows 87.7.
7. Insert the USB flash drive into the USB port closest to the 12V socket of your vehicle.



8. Leave the memory device inserted for at least 20 seconds.

9. Once 20 seconds has gone by, remove the device and switch the FM Transmitter off, then on using the switch located on the side of the unit.



10. Enter the desired station by pressing and holding the red phone button until blinking. Once blinking, use the “+” or “-” buttons on the side of the unit to enter the desired frequency.



11. Once the frequency has been entered, turn the vehicle off and then back on to verify that the unit has retained the desired frequency.
12. Enjoy your newly updated FM Transmitter.