

INSTALLATION INSTRUCTIONS

UNIVERSAL CELLULAR PHONE & ELECTRONIC MOBILE DEVICE "MODIFIABLE" VEHICLE MOUNTING BRACKET



NOTE: READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON PHONE MOUNT.

All phone mount instructions are written from the driver's seat position looking forward at the vehicle dash. We advise caution whenever you are removing or handling plastic parts of a vehicle's dash. **WARNING:** Unnecessary force or pressure can cause pieces to crack or break.


TOOLS RECOMMENDED: Dash Panel Tool (# SIT-104) for removing dash panels, Standard Automotive Hand Tools.

PARTS INCLUDED: One Universal Phone Mount, two (2) #8x3/4" Self Piercing Screws and Instructions.


RECOMMENDED LOCATION: Behind Dash Panels and/or Radio Bezel

PLEASE NOTE:

The photos and illustrations below are (only) to be used as a guide and as an example to help aid the installer to visualize an installation. All vehicles are configured differently behind the dash bezel.

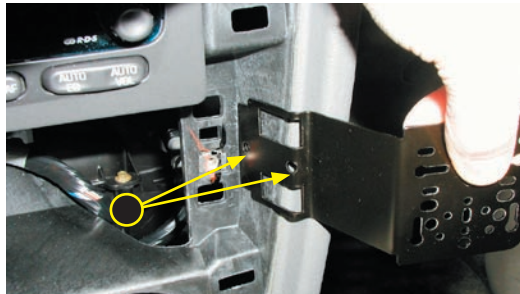

The bracket can be mounted to flat areas of radio dash cavities using the provided screws. **USE CAUTION**

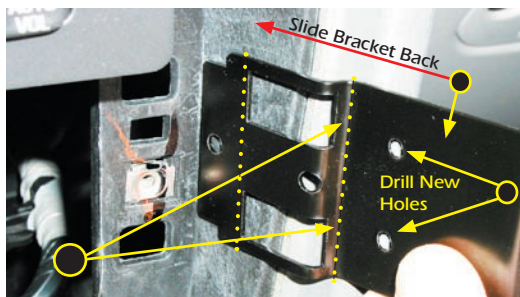

If desired, these areas can be bent or cut-off to adjust the length of the bracket sticking out from the dash.



Example of a completed installation with a Satellite Radio and Cell Phone


PLEASE READ BEFORE INSTALLING:

The Bracketron Universal Custom Bezel Mount is a modifiable cellular phone and/or electronic mobile device mounting bracket. This bracket has all the same features and benefits of a vehicle specific, "Custom Bezel Mount" with no exposed holes for an OEM look.

Unlike our "Custom Bezel Mounts", this "Universal Mounting Bracket" is customizable. **Bracketron does not supply detailed written instructions for the disassembly of your specific vehicles dash.** Bracketron **HIGHLY** recommends that you consult with a professional cellular or audio installer before attempting to install this product. Bracketron will not be responsible for damage to a vehicle caused by the installation of this bracket. **WARNING:** Always be aware of the vehicles Air-Bag location, always keep the mount away from the Air-Bag area.

The bracket is installed using non-visible holes behind the dash trim bezel in the same manner as Bracketron's Custom Bezel Mounts. The bracket is secured using either existing screws behind the dash or with holes drilled by the installer and secured with the provided hardware. The face of the bracket is a 4-way universal AMPS compatible hole pattern which allows you to mount the bracket in any direction (Up, Down, Right or Left). This allows the installer to locate the bracket where the end user would like it to be for maximum reach and visibility.

This bracket is designed to be bent, shaped and sniped easily to the curves of the dash cavity allowing the bracket to protrude out cleanly from the dash bezel. Most experienced installers and handy consumers can perform an installation with common automotive hand tools.

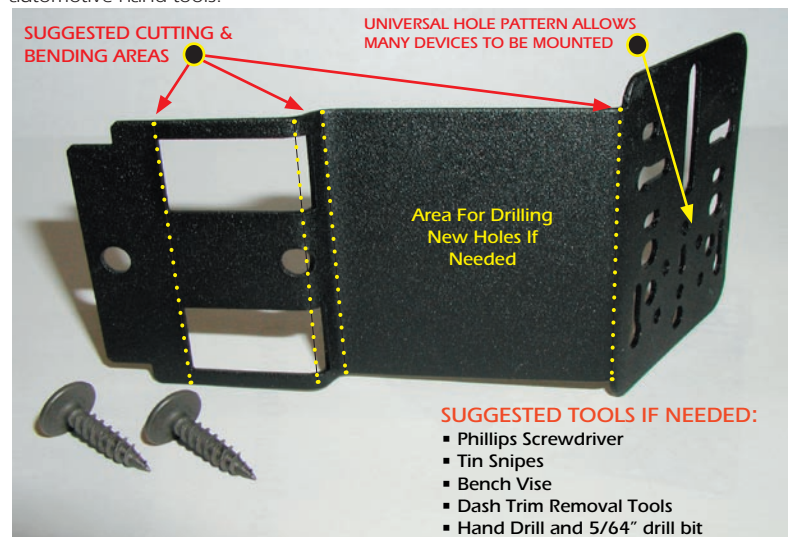

SUGGESTED TOOLS IF NEEDED:

- Phillips Screwdriver
- Tin Snipes
- Bench Vise
- Dash Trim Removal Tools
- Hand Drill and 5/64" drill bit

© Bracketron LLC. 2003. All rights reserved.

The information in this document is subject to change without notice. Bracketron LLC. assumes no responsibility for any errors that may appear in this document nor do we assume any liability in connection with its use. This supersedes and voids all previous literature. Please contact the sales department for additional information.

Bracketron LLC will not be responsible or liable for damage to vehicles in the installation and/or