

INSTALLATION MANUAL

FOR

FORD - EXPLORER - 2006-2009

FORD - EXPLORER SPORT TRAC - 2006-2009

MERCURY - MOUNTAINEER - 2006-2009

Mount Location: To the Right of the Radio

MVM

Multi Vehicle Mount

MVM-15-05

Includes PHS-203 Ultra Slim Swivel



Thank you for purchasing your new Bracketron MVM Multi Vehicle Mount.

The Multi Vehicle Mount is an (end user-installer) modifiable professional mounting bracket for most all mobile electronics requiring a steady and secure installation in a motor vehicle. The MVM installs behind your vehicles dash panel using existing or non-visible holes and is designed to cleanly protrude out from your vehicle's dash panel.

Before installing, you must take the time to read and understand this installation manual and read all the warnings accompanying this product.

Instructions Include: tools needed for install, directions for dash panel removal, directions for modifying the MVM if required.

You can download this manual and any updates from
<http://www.bracketron.com/downloads>

IMPORTANT INFORMATION

IMPORTANT INFORMATION

Please read instructions completely before installing this Bracketron MVM Mount. All instructions are written from the drivers seat vantage point looking forward at the vehicles dash. We advise caution whenever you are removing or handling plastic parts of a vehicles dash. **WARNING:** Unnecessary force or pressure can cause pieces to crack or break.

PARTS INCLUDED: MVM-15-05 Mount, 3- #8x3/4" Self Tapping Screws PHS-203 Ultra Slim Swivel, and Hardware

TOOLS NEEDED FOR DASH PANEL DISASSEMBLY

Dash Trim Tool (Part #SIT-104)
#2 Phillips Screwdriver
Fiskars 8511 Craft Hand Drill (recommended)
5/64" Drill Bit
9/32" Open End Wrench (for swivel)
Marking Pen
Razor Blade

TOOLS NEEDED FOR MVM MODIFICATION (if required)

DASH DISASSEMBLY INSTRUCTION

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.



- 1 Begin installation by opening center arm console and remove two (2) 9/32" socket screws from the front of the arm console. Note: See inset on top picture to the left. Continue by removing the silver bezel that surrounds the shifter knob. Use the Dash Trim Tool (part #SIT-104) to release four (4) small clips that secure the bezel. Depress emergency brake, turn ignition to the "On" position, and place vehicle in neutral. Use the Dash Trim Tool to release four more clips that secure the base of the shifter bezel. Disconnect the power supply and set bezel aside.



- 2 Use Dash Trim Tool to release two (2) clips from the bottom of the Radio/Climate Control Bezel. Do the same at the top of this bezel and work your way to the middle to also release two (2) more clips. Note: There are a total of six (6) clips that need to be released before this dash bezel can be removed. Pull this bezel out and let hang to the side. Do not disconnect any wiring.

- 3 Align the MVM to the right of the climate control area. Use a pen to mark where you will need to trim the lip. Mark a two inch area and trim the lip using a razor blade so it is flush with where the trim bezel rests. Note: See middle picture for guidance

- 4 Continue by removing four (4) 9/32" socket screws from the right and left sides of the radio. Set the screws aside carefully. Slide the radio out and rest it on the shifter knob. Place the MVM over the previously trimmed area to the right of the radio and insert the three (3) provided self tapping screws.

- 5 Carefully reinstall the dash in reverse order securing all screws and clips to the bezel. Install the included Ultra Slim Swivel #PHS-203 to your Multi Vehicle Mount or any other AMPs compatible device.


Your installation is complete



MVM MODIFICATION INSTRUCTIONS

PLEASE NOTE

The Bracketron MVM-15-05 mount is a modifiable mounting bracket. The illustrations on the left show how this mount should look during and after the modification steps in order to fit the listed vehicles on the front page of this manual. **Many vehicle applications may not require any modifications to the mount. If this is the case it will be noted below and there will be no steps to follow on this page.**

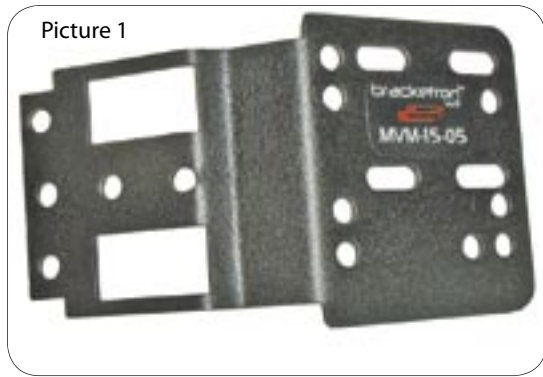

5 **Note:** There are no modifications required to the MVM mount for this application.

6 **Note:** Please see page 3 in this manual for PHS-203 Ultra Slim Swivel Instructions.

Note: The hole pattern on the face of the MVM may be different than what is shown in the pictures.

PHS-203 ULTRA SLIM SWIVEL INSTRUCTIONS

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON MOBILE SOLUTION.

This Professional Swivel Mount Solution is designed to be mounted to your MVM or any other 4 hole AMPs compatible mounting device. The Ultra Slim Swivel is compact with a low profile and is designed to provide adjustability to devices such as Satellite Radio Receivers, GPS monitors or Mobile Phones. The Ultra Slim Swivel angles your device for better viewing, tilting approx 15° in all directions and swivels 360° degrees for maximum adjustability. All mounting hardware is included in the kit along with our AMPs adapter plate to attach devices that support T- Notch mounting.

PARTS INCLUDED

- 1 - Ultra Slim Swivel
- 1 - AMPs Adapter Plate
- 4 - M4 x 10 Hex Head Screws
- 4 - M4 x 10 Pan Head Screws
- 4 - M4 x 12 Pan Head Screws
- 4 - M4 Hex Head Nuts
- 4 - M4 Nylon Locking Nuts
- 4 - M4 Star Washers

1 **Note:** The swivel can be installed before or after the mount is installed in the vehicle. Attach the Ultra Slim Swivel to any MVM or CBM Mount or other AMPs mounting device by inserting the M4x10 Pan Head screws through the holes on the back half of the swivel. Align the screws up with the holes on the mount. Attach the M4 Nylon Locking Nuts only finger tight. Rotate the front half of the swivel to gain access to the M4x10 Pan Head screws. (See Picture 1&2) Tighten all 4 screws with a #2 Phillips screwdriver and 9/32" open end wrench.


Picture 1



Picture 2



Picture 3

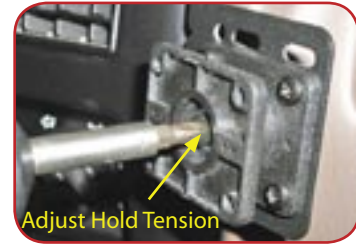

2 Tighten the center screw to adjust the desired tension of the swivel. (See Picture 3) **Note:** If Swivel becomes loose over time, you can grasp the swivel and pull toward you lightly while rotating it clockwise. This will tighten the swivel allowing you to create the desired tension needed.

Picture 4



For T- Notch Devices

Attach the AMPs T- Notch Adapter to the front half of the swivel using the M4x12 Pan Head screws. Attach the M4 Star Washers and M4 Hex Nuts to the screws and tighten the plate down with the #2 screwdriver and 9/32" open end wrench. Slide your device onto the T- notch Adapter plate to secure it to the swivel. (See Pictures 4)

3

For AMPs Devices with Inserts

Attach your AMPs device using the M4x10 Hex Head screws and M4 Star Washers. Align the holes on the device with the holes on the front half of the swivel. Slide the Star Washers onto the Hex Head screws. Insert the screws through the swivel and into your device only finger tight. Tighten down the device with the 9/32" open end wrench. Your device is now secure to the swivel. (See Pictures 5)

Picture 5

