

INSTALLATION MANUAL FOR

TOYOTA - TUNDRA - 2007-2009

TOYOTA - SEQUOIA - 2008-2009

Mount Location: To the right of the radio

MVM Multi Vehicle Mount

MVM-35-05

Includes PHS-203 Ultra Slim Swivel



Thank you for purchasing your new Bracketron **MVM** Multi Vehicle Mount.

The Multi Vehicle Mount is an (end user-installer) modifiable professional mounting bracket for most all mobile electronics requiring a steady and secure installation in a motor vehicle. The MVM installs behind your vehicles dash panel using existing or non-visible holes and is designed to cleanly protrude out from your vehicle's dash panel.

Before installing, you must take the time to read and understand this installation manual and read all the warnings accompanying this product.

Instructions Include: tools needed for install, directions for dash panel removal, directions for modifying the MVM if required.

You can download this manual and any updates from
<http://www.bracketron.com/downloads>

IMPORTANT INFORMATION

IMPORTANT INFORMATION

Please read instructions completely before installing this Bracketron MVM Mount. All instructions are written from the drivers seat vantage point looking forward at the vehicles dash. We advise caution whenever you are removing or handling plastic parts of a vehicles dash. **WARNING:** Unnecessary force or pressure can cause pieces to crack or break.

PARTS INCLUDED: MVM-35-05 Mount, 3 - #8x3/4" Self Tapping Screws PHS-203 Ultra Slim Swivel and Hardware.

TOOLS NEEDED FOR DASH PANEL DISASSEMBLY


Dash Trim Tool (Part #SIT-104)
2 Phillips Screwdriver
Fiskars 8511 Craft Hand Drill (recommended)
5/64" Drill Bit
10mm Socket and Driver
9/32" Open End Wrench (for swivel)
Marking Pen

TOOLS NEEDED FOR MVM MODIFICATION *(if required)*

4 inch Mounted Bench Vise
12 oz. Ball Pein Hammer
Standard Tin Snips
Small File

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

DASH DISASSEMBLY INSTRUCTION

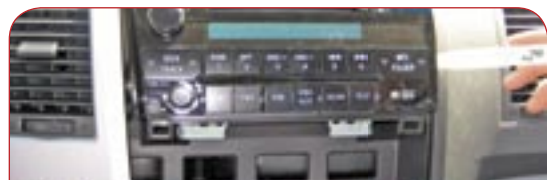

- 1 Begin installation by removing the cubby below the climate controls. Using a Dash Trim tool (part #SIT-104) insert it in the top right corner and release one (1) clips. Work your way around the panel and remove three (3) more clips. Disconnect the wiring and set the panel aside in a safe place.



- 2 Continue by inserting a Dash Trim tool (part #SIT-104) in the lower right corner of the instrument cluster bezel, just below the 4WD switch. **Note:** See the top picture to the left for guidance. Pry outward releasing a total of four (4) clips on the right side of the bezel. Next insert a Dash Trim tool (part #SIT-104) on the right side of the climate controls. Release two (2) clips on the on the right side. Work your way around the climate controls releasing two (2) more clips on the left side. Disconnect the wiring and set the climate controls aside in a safe place.



- 3 Next remove the four (4) 10mm screws on the bottom of the radio. Set the screws aside in a safe. Use a Dash Trim tool (part #SIT-104) and insert it on the right side of the radio release two (2) clips on the top of the radio. Disconnect the wiring and set the radio aside in a safe place.

- 4 Skip to **Step 7** on the following page if you have not yet formed the bracket to fit your vehicle.



- 5 Place the MVM in the area as shown in the picture to the left. Use a marking pen and mark the holes in the MVM as a guide. Carefully drill the holes using a 5/64" drill bit and hand drill. Place the MVM over the holes and insert the provided screws. Tighten the mount down.
- 6 Carefully reinstall the dash in reverse order securing all screws and clips to the bezel. Install the included Ultra Slim Swivel #PHS-203 to your Multi Vehicle Mount or any other AMPs compatible device.

Your installation is complete

MVM MODIFICATION INSTRUCTIONS

PLEASE NOTE

The Bracketron MVM-35-05 mount is a modifiable mounting bracket. The illustrations on the left show how this mount should look during and after the modification steps in order to fit the listed vehicles on the front page of this manual. *Many vehicle applications may not require any modifications to the mount. If this is the case it will be noted below and there will be no steps to follow on this page.*

Picture 1



7 Before you begin to form your MVM, please make sure it looks exactly the way it does in the top picture to the left.

8 To begin, use a marking pen to draw the lines on the MVM as depicted in red in the middle picture to the left. **Note:** See red lines in the middle picture for guidance.

9 Use a tin snips to cut along these lines. If the bracket gets bent use a small hammer to pound out any imperfections. If the paint chips use some black paint to cover up the paint.

Picture 2



Cut Mount Here

Now go back to **Step 5** on the previous page to finish installation.

Picture 3



Note: The hole pattern on the face of the MVM may be different than what is shown in the pictures.

5

Note: Please see page 3 in this manual for PHS-203 Ultra Slim Swivel Instructions.

PHS-203 ULTRA SLIM SWIVEL INSTRUCTIONS

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON MOBILE SOLUTION.

This Professional Swivel Mount Solution is designed to be mounted to your MVM or any other 4 hole AMPs compatible mounting device. The Ultra Slim Swivel is compact with a low profile and is designed to provide adjustability to devices such as Satellite Radio Receivers, GPS monitors or Mobile Phones. The Ultra Slim Swivel angles your device for better viewing, tilting approx 15° in all directions and swivels 360° degrees for maximum adjustability. All mounting hardware is included in the kit along with our AMPs adapter plate to attach devices that support T- Notch mounting.

PARTS INCLUDED

- 1 - Ultra Slim Swivel
- 1 - AMPs Adapter Plate
- 4 - M4 x 10 Hex Head Screws
- 4 - M4 x 10 Pan Head Screws
- 4 - M4 x 12 Pan Head Screws
- 4 - M4 Hex Head Nuts
- 4 - M4 Nylon Locking Nuts
- 4 - M4 Star Washers

- 1** **Note: The swivel can be installed before or after the mount is installed in the vehicle.** Attach the Ultra Slim Swivel to any MVM or CBM Mount or other AMPs mounting device by inserting the M4x10 Pan Head screws through the holes on the back half of the swivel. Align the screws up with the holes on the mount. Attach the M4 Nylon Locking Nuts only finger tight. Rotate the front half of the swivel to gain access to the M4x10 Pan Head screws. (See Picture 1&2) Tighten all 4 screws with a #2 Phillips screwdriver and 9/32" open end wrench.


Picture 1



Picture 2



Picture 3

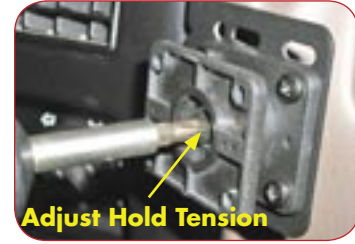

- 2** Tighten the center screw to adjust the desired tension of the swivel. (See Picture 3) **Note:** If Swivel becomes loose over time, you can grasp the swivel and pull toward you lightly while rotating it clockwise. This will tighten the swivel allowing you to create the desired tension needed.

For T- Notch Devices

Attach the AMPs T- Notch Adapter to the front half of the swivel using the M4x12 Pan Head screws. Attach the M4 Star Washers and M4 Hex Nuts to the screws and tighten the plate down with the #2 screwdriver and 9/32" open end wrench. Slide your device onto the T- notch Adapter plate to secure it to the swivel. (See Pictures 4)

- 3**

For AMPs Devices with Inserts

Attach your AMPs device using the M4x10 Hex Head screws and M4 Star Washers. Align the holes on the device with the holes on the front half of the swivel. Slide the Star Washers onto the Hex Head screws. Insert the screws through the swivel and into your device only finger tight. Tighten down the device with the 9/32" open end wrench. Your device is now secure to the swivel. (See Pictures 5)

Picture 4



Picture 5

