

## INSTALLATION INSTRUCTIONS

FORD EXCURSION (2000-2005)  
 FORD F650 SUPER DUTY PICKUP (2000-2004) (A/T only)  
 FORD F550 SUPER DUTY PICKUP (2000-2004) (A/T only)  
 FORD F250, F350, F450 SUPER DUTY PICKUP (1999-2004) (A/T only)  
 ( **Automatic Transmisson Only** )



**NOTE: READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON PHONE MOUNT.**



All phone mount instructions are written from the drivers seat position looking forward at the vehicle dash. We advise caution whenever your removing or handling plastic parts of a vehicles dash. **WARNING:** Unnecessary force or pressure can cause pieces to crack or break.

Logo and part number will be right side up and readable when installed.

**TOOLS NEEDED:** One (1) set of Ford DIN tools, one (1) 9/32" socket and ratchet, one (1) 9/32" open end wrench, one (1) coarse file, one (1) marking pen and duct tape

**PARTS INCLUDED:** One phone mount and instructions.

**LOCATION OF MOUNT:** Below climate control

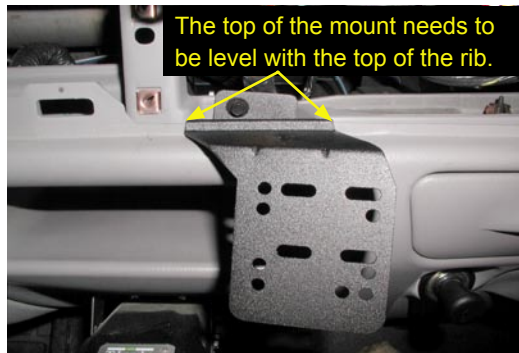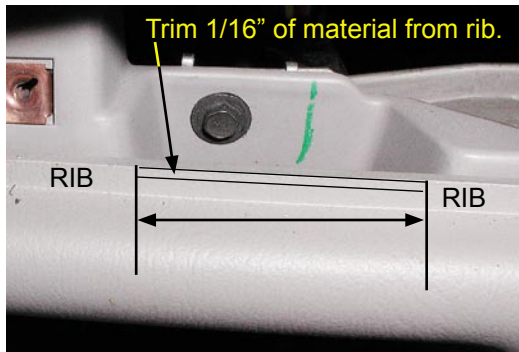

### Step 1.

Locate four holes on the face of the radio. There are two holes on the right and two holes on the left. Insert the DIN tools in these holes until you feel and hear a click. Apply pressure on the DIN tools toward the left and right while simultaneously sliding the radio out of its cavity. **Carefully** remove the wiring on the back of the radio and set it aside. Locate two screws in the inside top area of the radio cavity. Remove these screws with the 9/32" socket and ratchet. With your hand and fingers, grab the lower right corner of the dash bezel and carefully pull toward you to release the lower right clip. After that clip is loose, carefully grasp the lower section of the trim bezel on the left and right of the climate control. Slowly pull toward you releasing two clips. Grab the top right corner of the bezel and pull toward you releasing the top right clip. Slowly work the top clips loose all the way to the left of the steering wheel. Work the lower clips loose for a total of 13 clips.

**Tip:** Apply the emergency brake and place the gear shifter in low gear, then tilt the steering wheel in the low position. When the bezel is loose, disconnect all the wiring, remove the bezel and place it in a safe place.

### Step 2.

With the 9/32" socket and ratchet, remove the four screws that hold the climate control in place. **Note:** Do not disconnect any wiring to the climate control. Pull out and prop the climate control inside the cavity for the radio. In the lower left corner of the climate control cavity there is a hex head screw. Use the 9/32" open-end wrench to remove that screw. Put the screw in a safe place. Take the **Bezel Mount** and put it inside the climate control cavity and line up the screw holes. With the **Bezel Mount** in place, make two marks on the left and right sides of the mount on the dash rib using a marking pen. (See Picture) Take the **Bezel Mount** out of the cavity. Place some duct tape on both sides of your marks and any other areas that can accidentally get scratched. **Carefully** remove about a 1/16" of material from the top of the rib between the duct tape using the coarse file. Clean up all the shavings and remove the duct tape.

### Step 3.

Install the **Bezel Mount** inside the climate control cavity. Align the hole in the mount with the screw hole in the dash. Insert the hex head screw and tighten with the 9/32" open-end wrench. Make sure that that the top of the mount is level with the top of the rib.

Reinstall the dash in reverse order. Install any Bracketron phone holder or Amps compatible device to your **Bezel Mount**.

Your installation is complete

© Bracketron LLC, 2004 All rights reserved.

The information in this document is subject to change without notice. Bracketron LLC. assumes no responsibility for any errors that may appear in this document nor do we assume any liability in connection with its use. This supersedes and voids all previous literature. Literature already in circulation may not be current. Please contact the sales department for additional information.

Bracketron LLC will not be responsible or liable for damage to vehicles in the installation and or removal of this Bracketron LLC phone mount.

Bracketron LLC will not be liable for personal injuries or damage to property resulting from a motor vehicle accident and or improper installation of this Bracketron LLC phone mount.

Bracketron LLC 11401 Excelsior Blvd Suite 5, Hopkins MN 55343, Ph: 651-952-746-7775 Fax: 1-800-660-1784 Toll Free: 1-866-237-4443

Web Address: [www.bracketron.com](http://www.bracketron.com)