INSTALLATION MANUAL

FOR

CADILLAC ESCALADE SUV - 2007-2009

CADILLAC ESCALADE EXT - 2007-2009

CADILLAC ESCALADE ESV - 2007-2009

Mount Location: To the Right of the Climate Control

MVM

Multi Vehicle Mount

MVM-45-05

Includes PHS-203 Ultra Slim Swivel

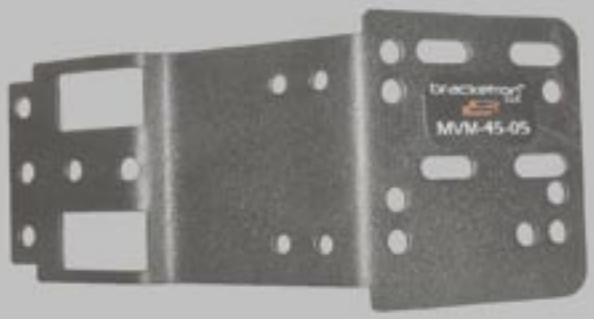

Thank you for purchasing your new Bracketron MVM Multi Vehicle Mount.

The Multi Vehicle Mount is an (end user-installer) modifiable professional mounting bracket for most all mobile electronics requiring a steady and secure installation in a motor vehicle. The MVM installs behind your vehicles dash panel using existing or non-visible holes and is designed to cleanly protrude out from your vehicle's dash panel.

Before installing, you must take the time to read and understand this installation manual and read all the warnings accompanying this product.

Instructions Include: tools needed for install, directions for dash panel removal, directions for modifying the MVM if required.

You can download this manual and any updates from
http://www.bracketron.com/downloads

IMPORTANT INFORMATION

IMPORTANT INFORMATION

Please read instructions completely before installing this Bracketron MVM Mount. All instructions are written from the drivers seat vantage point looking forward at the vehicles dash. We advise caution whenever you are removing or handling plastic parts of a vehicles dash. WARNING: Unnecessary force or pressure can cause pieces to crack or break.

PARTS INCLUDED: MVM-45-05 Mount, 3 - #8x3/4" Self Tapping Screws, 2 - M4x8 Phillips Pan Head Screws, 2 - M4 Nylon Stop Nuts, PHS-203 Ultra Slim Swivel and Mounting Hardware.

TOOLS NEEDED FOR DASH PANEL DISASSEMBLY

Dash Trim Tool (Part #SIT-104)
9/32" Socket and Driver
9/32" Open End Wrench (for swivel)

TOOLS NEEDED FOR MVM MODIFICATION (if required)

4 inch Mounted Bench Vise
12 oz. Ball Pein Hammer
Standard Tin Snips
Small File

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

DASH DISASSEMBLY INSTRUCTION

1. Begin by placing the Dash Trim Tool (Part #SIT-104) beneath the lower left corner of the dash bezel located below the passenger air bag. Note: See top inset in first image. Pry towards you to release the lower left clip. Continue clockwise around the bezel to release all clips. When all clips are released, pull bezel away from dash and set side carefully. Continue by removing the bezel that surrounds the center console and cup holders. Note: This bezel is fragile and the four (4) metal clips are very tight. Start from the back towards the armrest and use the Dash Trim Tool to release one clip. Slowly work your way forward on both sides of the bezel, releasing the remaining clips.

2. Finish removing the dash bezels by releasing the clips around the main bezel theat surrounds the radio and climate control. This bezel has six (6) clips that secure it in place. Remove this bezel completely and disconnect wires as necessary.

3. Skip to Step 5 on the following page if you have not yet formed the bracket to fit your vehicle.

4. Locate and remove one 9/32" screw from the upper right corner of climate control mounting tabs and set aside in safe place. Place the Multi Vehicle Mount over the screw hole and replace factory screw and tighten. Note: Make sure to hold the Multi Vehicle Mount flush to the edge of the dash so that it is properly aligned.

Carefully reinstall the dash in reverse order securing all screws and clips to the bezel. Install the included Ultra Slim Swivel #PHS-203 to your Multi Vehicle Mount or any other AMPs compatible device.

Your installation is complete

MVM MODIFICATION INSTRUCTIONS

PLEASE NOTE

The Bracketron MVM-45-05 mount is a modifiable mounting bracket. The illustrations on the left show how this mount should look during and after the modification steps in order to fit the listed vehicles on the front page of this manual. Many vehicle applications may not require any modifications to the mount. If this is the case it will be noted below and there will be no steps to follow on this page.

Picture 1

Picture 2

Picture 3

Bend Mount Here

Note: The hole pattern on the face of the MVM maybe different then what is shown in the pictures.

5. Begin forming the Multi Vehicle Mount by cutting the Multi Vehicle Mount along the solid red line with a tin snips. See picture #1. Smooth out with file if necessary. Note: You do not want any sharp edges.

6. At this point, your Multi Vehicle Mount should look like the image in picture #2. Bend the bracket at a near 90 degree angle so that it is flat along the backside. Note: It is easiest to bend the bracket with a small bench vise and the use of a small hammer to flatten to perfection.

7. After step six, your bracket should look like picture #3 below. When it is bent at a near 90 degree angle, smooth out the edges so there are no sharp points. Use a crackle coated paint if you have damaged any exposed areas. Now go back to step 4 on the previous page to continue your installation.

Note: Please see page 3 in this manual for PHS-203 Ultra Slim Swivel Instructions.

© Bracketron Inc., 2007 All rights reserved.
The information in this document is subject to change without notice. Bracketron Inc. assumes no responsibility for any errors that may appear in this document nor do we assume any liability in connection with its use. This supersedes and voids all previous literature. Please contact the sales department for additional information. Bracketron Inc. will not be responsible or liable for damage to vehicles in the installation and or removal of this Bracketron Inc. mount. Bracketron Inc. will not be liable for personal injuries or damage to property resulting from a motor vehicle accident and or improper installation of this Bracketron Inc. mount.

Bracketron Inc. 5249 West 73rd Street, Suite G, Edina, MN 55439
tel: 952-746-7775 fax: 1-800-660-1784 toll free: 1-866-237-4443
email: sales@bracketron.com web: www.bracketron.com

PHS-203 ULTRA SLIM SWIVEL INSTRUCTIONS

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLING THIS BRACKETRON MOBILE SOLUTION.

This Professional Swivel Mount Solution is designed to be mounted to your MVM or any other 4 hole AMPs compatible mounting device. The Ultra Slim Swivel is compact with a low profile and is designed to provide adjustability to devices such as Satellite Radio Receivers, GPS monitors or Mobile Phones. The Ultra Slim Swivel angles your device for better viewing, tilting approx 15° in all directions and swivels 360° degrees for maximum adjustability. All mounting hardware is included in the kit along with our AMPs adapter plate to attach devices that support T- Notch mounting.

PARTS INCLUDED

1 - Ultra Slim Swivel
1 - AMPs Adapter Plate
4 - M4 x 10 Hex Head Screws
4 - M4 x 10 Pan Head Screws
4 - M4 x 12 Pan Head Screws
4 - M4 Hex Head Nuts
4 - M4 Nylon Locking Nuts
4 - M4 Star Washers

1 Note: The swivel can be installed before or after the mount is installed in the vehicle. Attach the Ultra Slim Swivel to any MVM or CBM Mount or other AMPs mounting device by inserting the M4x10 Pan Head screws through the holes on the back half of the swivel. Align the screws up with the holes on the mount. Attach the M4 Nylon Locking Nuts only finger tight. Rotate the front half of the swivel to gain access to the M4x10 Pan Head screws. (See Picture 1&2) Tighten all 4 screws with a #2 Phillips screwdriver and 9/32" open end wrench.

Picture 1

Picture 2

Picture 3

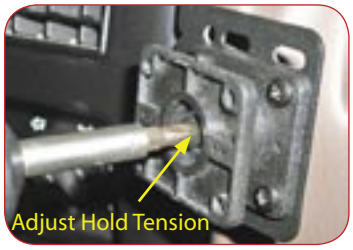

2 Tighten the center screw to adjust the desired tension of the swivel. (See Picture 3) Note: If Swivel becomes loose over time, you can grasp the swivel and pull toward you lightly while rotating it clockwise. This will tighten the swivel allowing you to create the desired tension needed.

For T- Notch Devices

3 Attach the AMPs T- Notch Adapter to the front half of the swivel using the M4x12 Pan Head screws. Attach the M4 Star Washers and M4 Hex Nuts to the screws and tighten the plate down with the #2 screwdriver and 9/32" open end wrench. Slide your device onto the T- notch Adapter plate to secure it to the swivel. (See Pictures 4)

Picture 4

For AMPs Devices with Inserts

Attach your AMPs device using the M4x10 Hex Head screws and M4 Star Washers. Align the holes on the device with the holes on the front half of the swivel. Slide the Star Washers onto the Hex Head screws. Insert the screws through the swivel and into your device only finger tight. Tighten down the device with the 9/32" open end wrench. Your device is now secure to the swivel. (See Pictures 5)

Picture 5

© Bracketron Inc., 2007 All rights reserved.
The information in this document is subject to change without notice. Bracketron Inc. assumes no responsibility for any errors that may appear in this document nor do we assume any liability in connection with its use. This supersedes and voids all previous literature. Please contact the sales department for additional information. Bracketron Inc. will not be responsible or liable for damage to vehicles in the installation and or removal of this Bracketron Inc. mount. Bracketron Inc. will not be liable for personal injuries or damage to property resulting from a motor vehicle accident and or improper installation of this Bracketron Inc. mount.

Bracketron Inc. 5249 West 73rd Street, Suite G, Edina, MN 55439
tel: 952-746-7775 fax: 1-800-660-1784 toll free: 1-866-237-4443
email: sales@bracketron.com web: www.bracketron.com